

Installation Manual

PTL-ETC



For Technical Support:
Email: sales@lucasdist.com
Toll-Free: 866-232-4233
Outside US: 770-554-5560
www.lucasdist.com

Made in the USA!

PTL-ETC Installation Manual

1. Position the base plate on the rear of the printer. Look for a smooth surface that will not block vents or access panels. Be sure the cover plate will fit on the base plate. Mark this area with a pencil.

Base Plate



2. Using the included alcohol wipes, clean the marked area of the printer and the rubber on the base plate. Allow to fully air dry.



3. Apply the adhesive down the middle of the base plate. Press the base plate firmly onto the marked area and hold for 2 minutes. Try to work out any air pockets and wipe away excess glue.



4. Allow the plate to sit undisturbed for 24 hours. Slide the cover plate onto the base plate, and run the cable through both sets of holes. Attach the padlock to the end of the cable.

