MODEL 7FLEX®
Installation Instructions

1

2

A
B
C
C
C
C

3

*
D
D
D
D
D

*Some monitors may require a spacer hardware kit. See page 2 for details.

4

E
F

5

G

6

!
G

7

H

8

I

?

800.524.2744
www.LCDarms.com
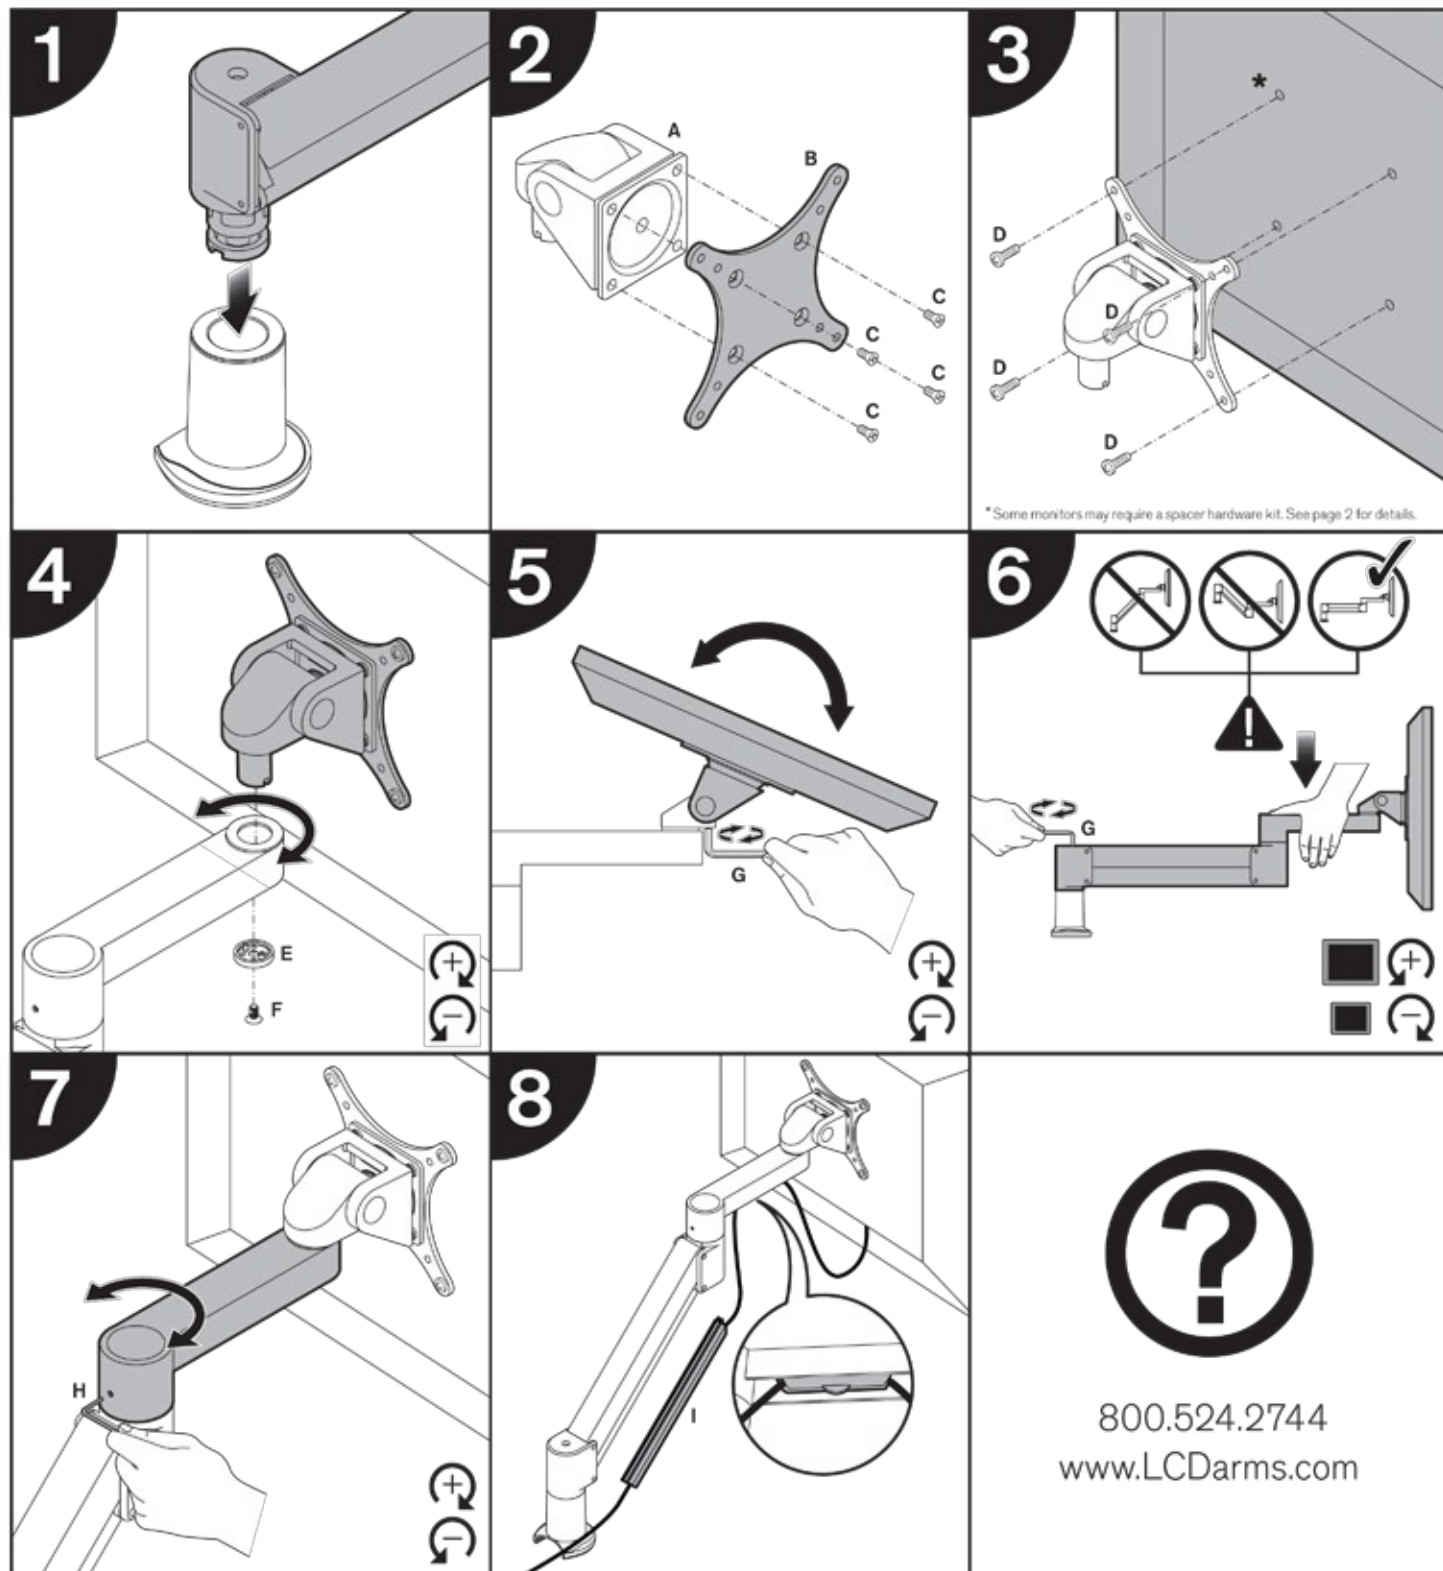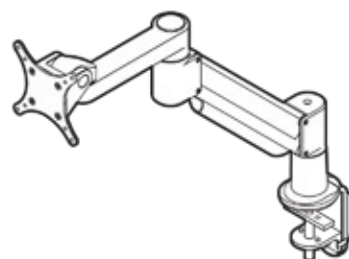
MODEL 7FLEX®
Parts List

ITEM		DESCRIPTION / PART NO.	QUANTITY
A		**Monitor Tilter** 405397	1
B		**75/100mm VESA® Adapter Plate** 105587	1
C		**10-32 x 3/8" Phillips Pan Head Screw** 702281 (4-pack)	1
D		**M4 x 12mm Phillips Pan Head Screw** 702096 (4-pack)	1
E		**Dog Washer** 105189	1

ITEM		DESCRIPTION / PART NO.	QUANTITY
F		**10-32 x 3/8" FPhMS w/Lock Patch** 705198	1
G		**7/32" Allen Wrench** 701127	1
H		**3/32" Allen Wrench** 700146	1
I		**Cable Cap** 102043-9.5	1

OPTIONAL SPACER KITS In some cases, the mounting surface on your monitor may be recessed further than permitted by VESA® standards. As a result, a spacer kit may be required.
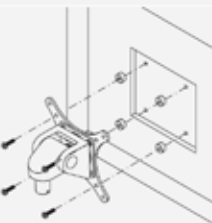
.25" Spacer Hardware Kit
(4) .25" Spacers
(4) M4 x 18mm Phillips Pan Head Screws

Order # P404923-B
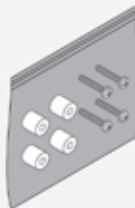
.5" Spacer Hardware Kit
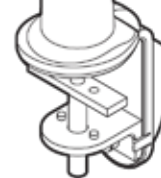(4) .5" Spacers
(4) M4 x 25mm Phillips Pan Head Screws

Order # P404923-C

7FLEX® MOUNT
Installation Instructions

Desk Clamp

1 A, I, B, D, G

2 E, H

3 C, F, L

Thru-Desk

K, A, B, F, I

Wall Mount

1 D, * , *
Hardware not included.

2 I, A, J

Reverse Wall Mount

1 D, *, *
Hardware not included.

2 I, A, G

Grommet Hole

K, A, B, F, I

Side Bolt

1 I, A, B, D, G

2 *, *
Hardware not included.
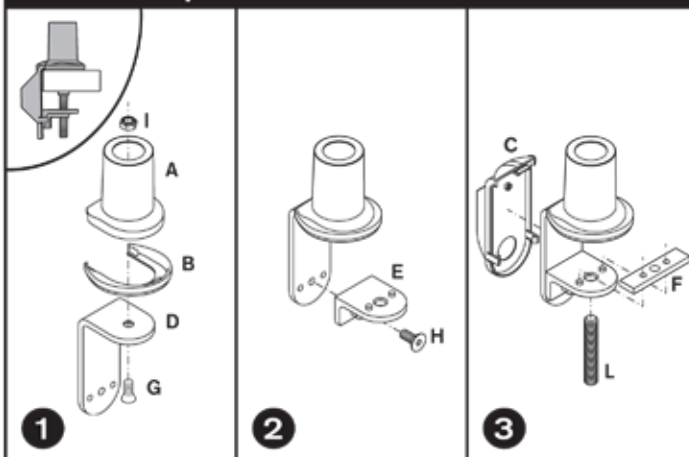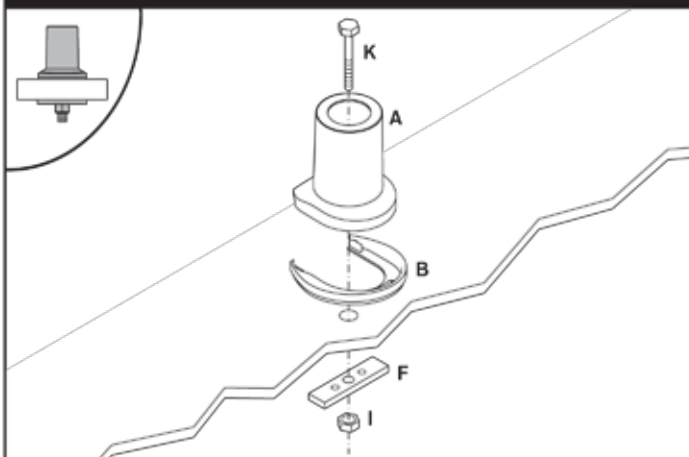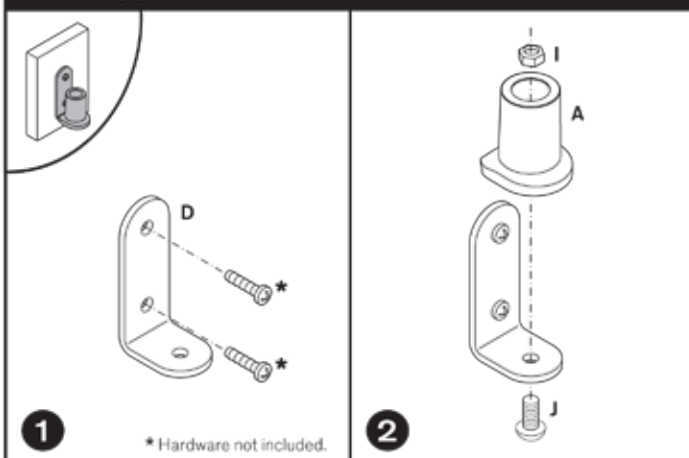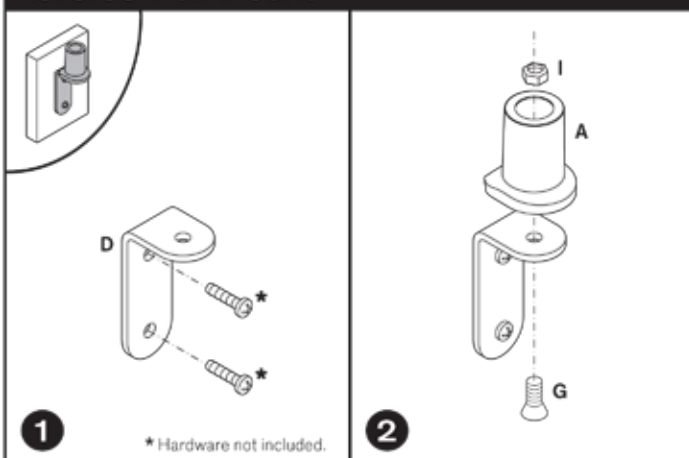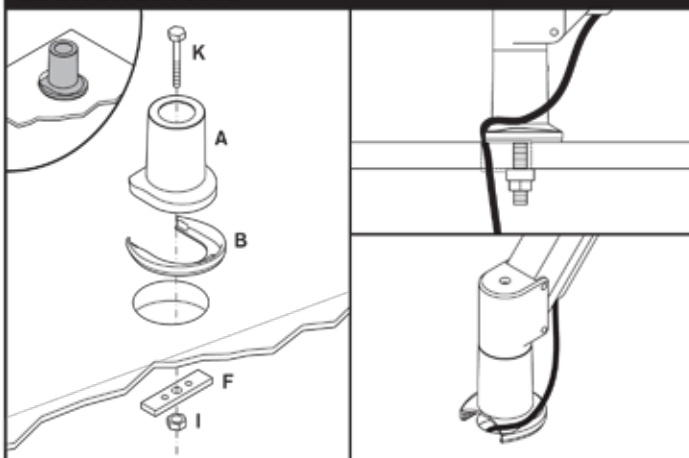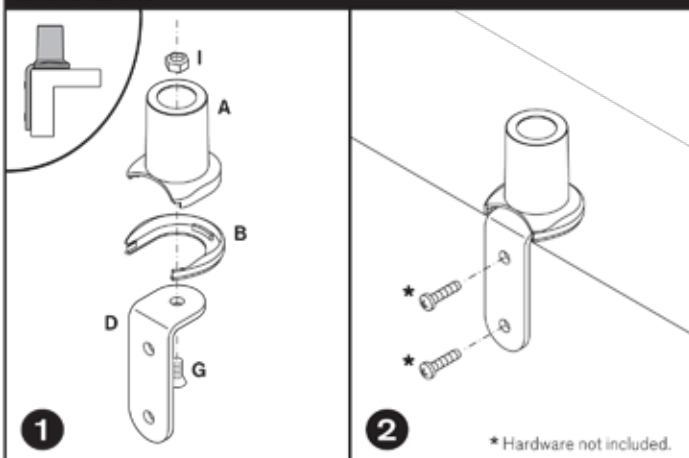
7FLEX® MOUNT
Parts List

ITEM		DESCRIPTION / PART NO.	QUANTITY
A		**Mount Cup** 406715	1
B		**Mount Cup Rubber Sole** 105553	1
C		**Cable Management** 105538	1
D		**Large "L" Bracket** 701117	1
E		**Small "L" Bracket** 701116	1
F		**Rectangular Spacer** 701544	1

ITEM		DESCRIPTION / PART NO.	QUANTITY
G		**3/8-16 x 1" Flat Socket Cap Screw** 701124	1
H		**3/8-16 x 7/8" Flat Socket Cap Screw** 701799	1
I		**3/8-16 Nylon Stop Nut** 701418	1
J		**3/8-16 x 7/8" Button Socket Cap Screw** 701122	1
K		**3/8-16 x 2-1/2" Hex Head Bolt** 700268	1
L		**1/2-13 x 3" Socket Set Screw** 701126	1

How do I counterbalance my arm?

1

IMPORTANT!
· Monitor must be on arm
· Arm must be in mount

Press the arm down to approximately parallel with the desk prior to turning the strength adjustment screw.
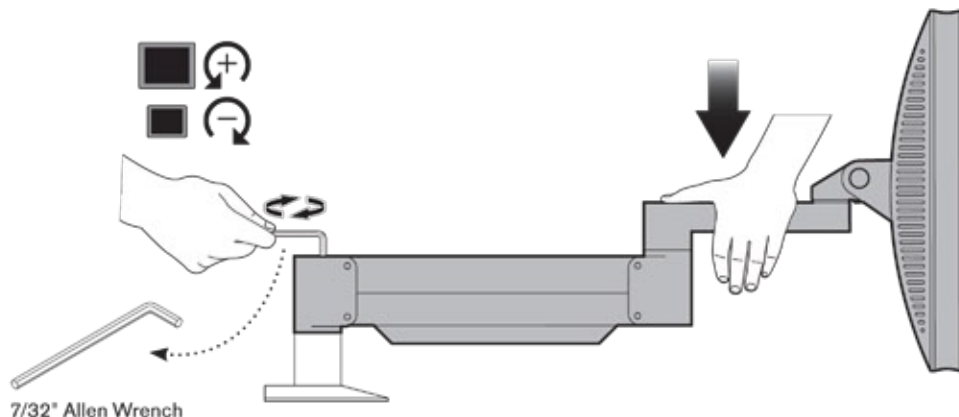
If the arm **drifts upward,** turn the adjustment screw clockwise.

If the arm **drifts downward,** turn the adjustment screw counter-clockwise.

Depending on the weight of your monitor, **you may have to make 15-20 turns.**

7/32" Allen Wrench

2

In some instances, further counterbalance adjustments are needed to allow the arm's instant height adjustment function to work properly.

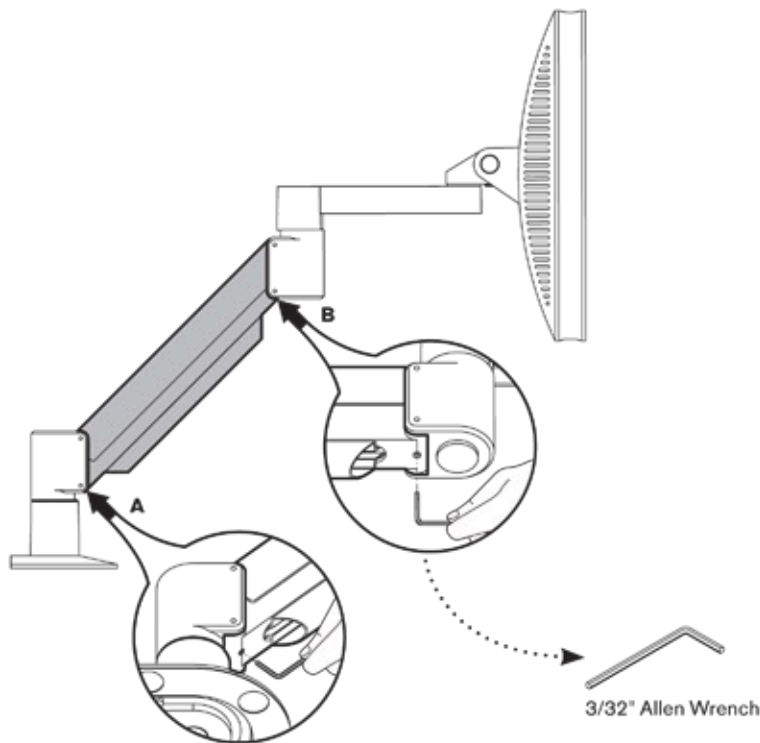If your arm is not staying in position after performing step 1, follow these steps:

With arm in raised position, tighten set screw **(A).**

With arm in horizontal position, tighten set screw **(B).**

Do not over tighten screws.

A

B

3/32" Allen Wrench